

RINK SEAL **PRO™**

*is the **solution!***

DIRECTIONS:

- 1. Remove container lid.**
- 2. Pour the contents of 1 bag into the bucket. (Note: Mix and apply one bag at a time to the system)**
- 3. Fill one inch from container top with water or coolant. (Note: Existing coolant can be used for mixing purposes)**
- 4. Attach provided mixing tool to battery/electric operated drill for best results. If battery/electric operated drill is not available, the material can be mixed with a mixing stick or paddle.**
- 5. Mix powder with mixing tool until powder is thoroughly mixed with the desired water or coolant.**
- 6. Inject the entire dosage into the system at a rate of approximately one gallon per minute. For best results install in suction line before pump. (Note: External pump can be used to install solution)**

NOTE: Do not install in Expansion tank or chiller/compressor part of system. Residual powder may be left in bottom of the container that may require repeating the mixing steps.

Technical Hotline:
Monday - Friday 8am-5pm EDT
 **855.974.2537**
 **support@shalerpro.com**
www.rinksealpro.com

KEEP OUT OF REACH OF CHILDREN

**Prolonged or frequent skin contact may cause
allergic reaction in some individuals.**